

INSTALLATION INSTRUCTION



4 to 1 Radar Adapter

The 4 to 1 Radar Adapter allows one radar velocity sensor to provide a ground speed signal for a maximum of four separate devices, such as a control system, instrument package, and planter monitor.

1. Connect the J1 connector to the Radar Velocity Sensor connector.
2. Connect J2 connector to the ground speed cable connector on the primary device.
3. Connect J3, J4, and J5 to each additional device's ground speed connector.
4. To prevent damage, ensure cables are secured so that wires are not pinched. J1 and J3 connectors have flanges for mounting and easy routing out of the cab.

Contact DICKEY-john Technical Support at 1-800-637-3302 for assistance.

IMPORTANT: The adapter and all connectors should be located in the cab or other weatherproof enclosure for additional protection.

