


Sprayer/Spreader Control Systems

Land Manager®

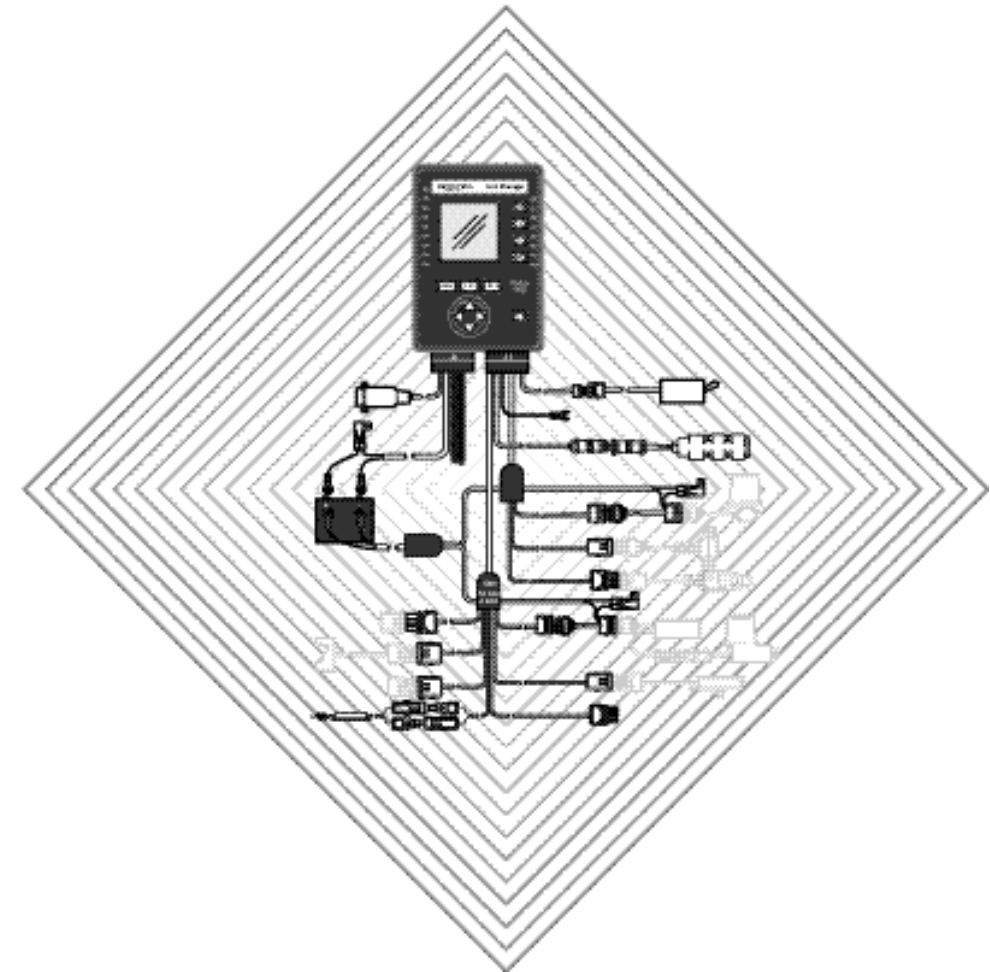

Operator's Troubleshooting
Manual, Wiring Diagrams

OPERATOR'S SERVICE MANUAL

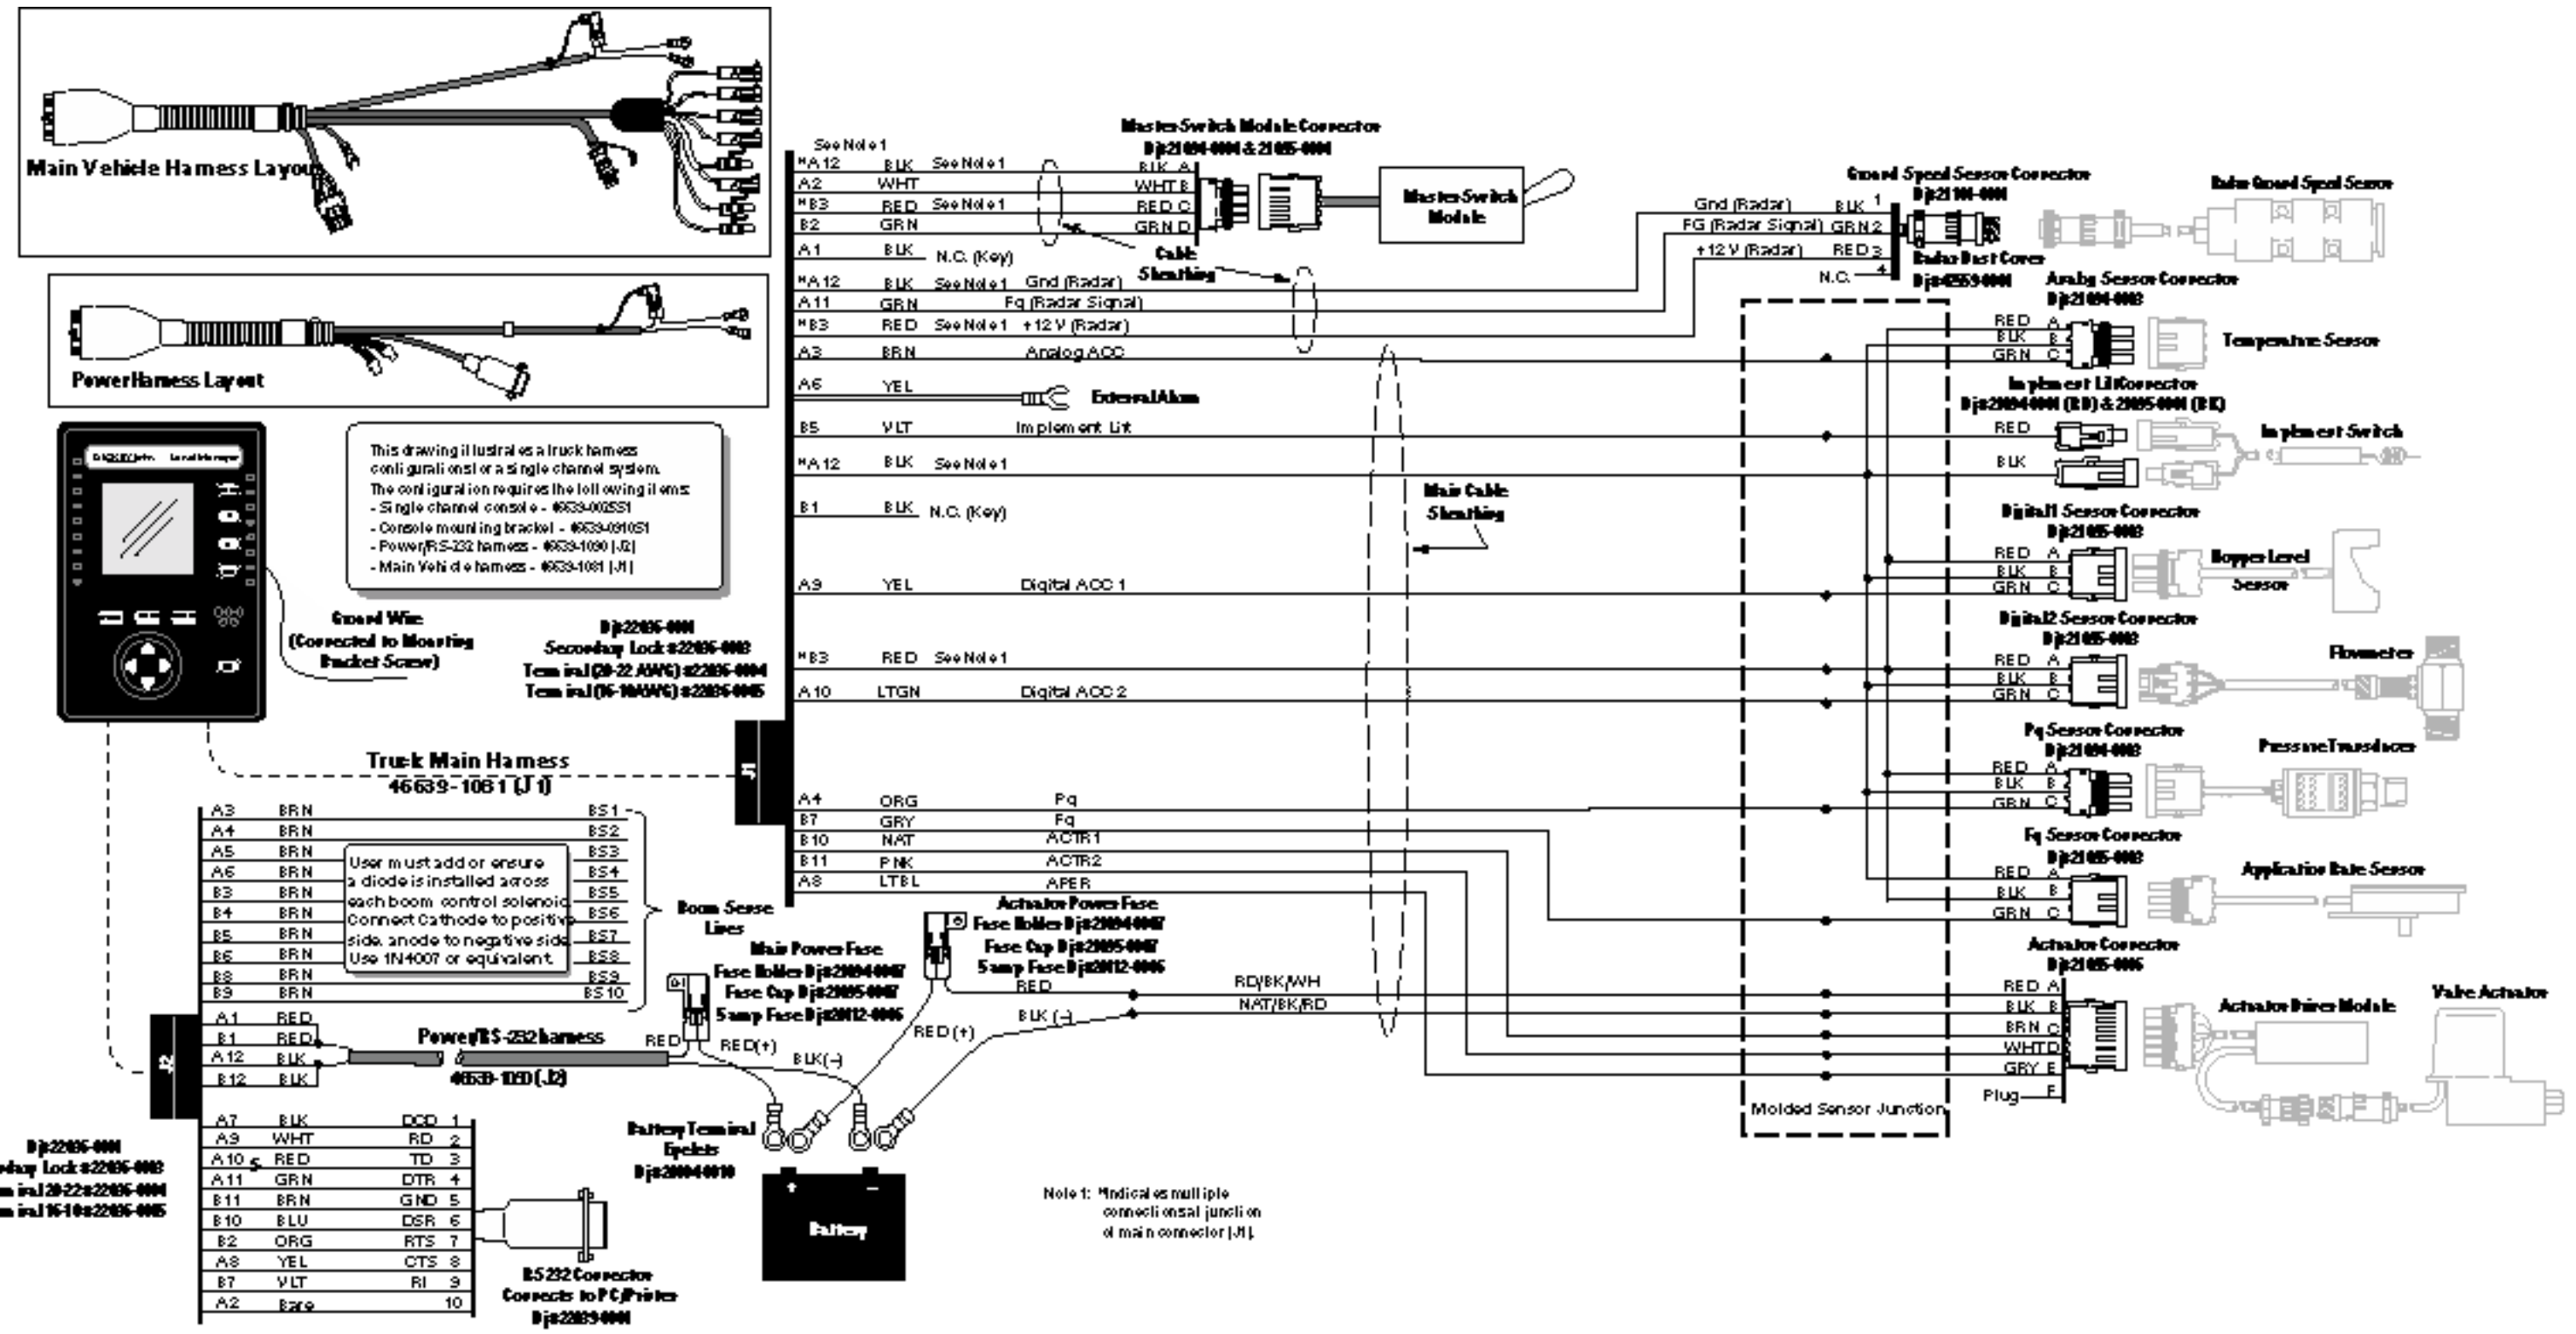


Figure 6. Truck Harnesses, Single Channel System

OPERATOR'S SERVICE MANUAL

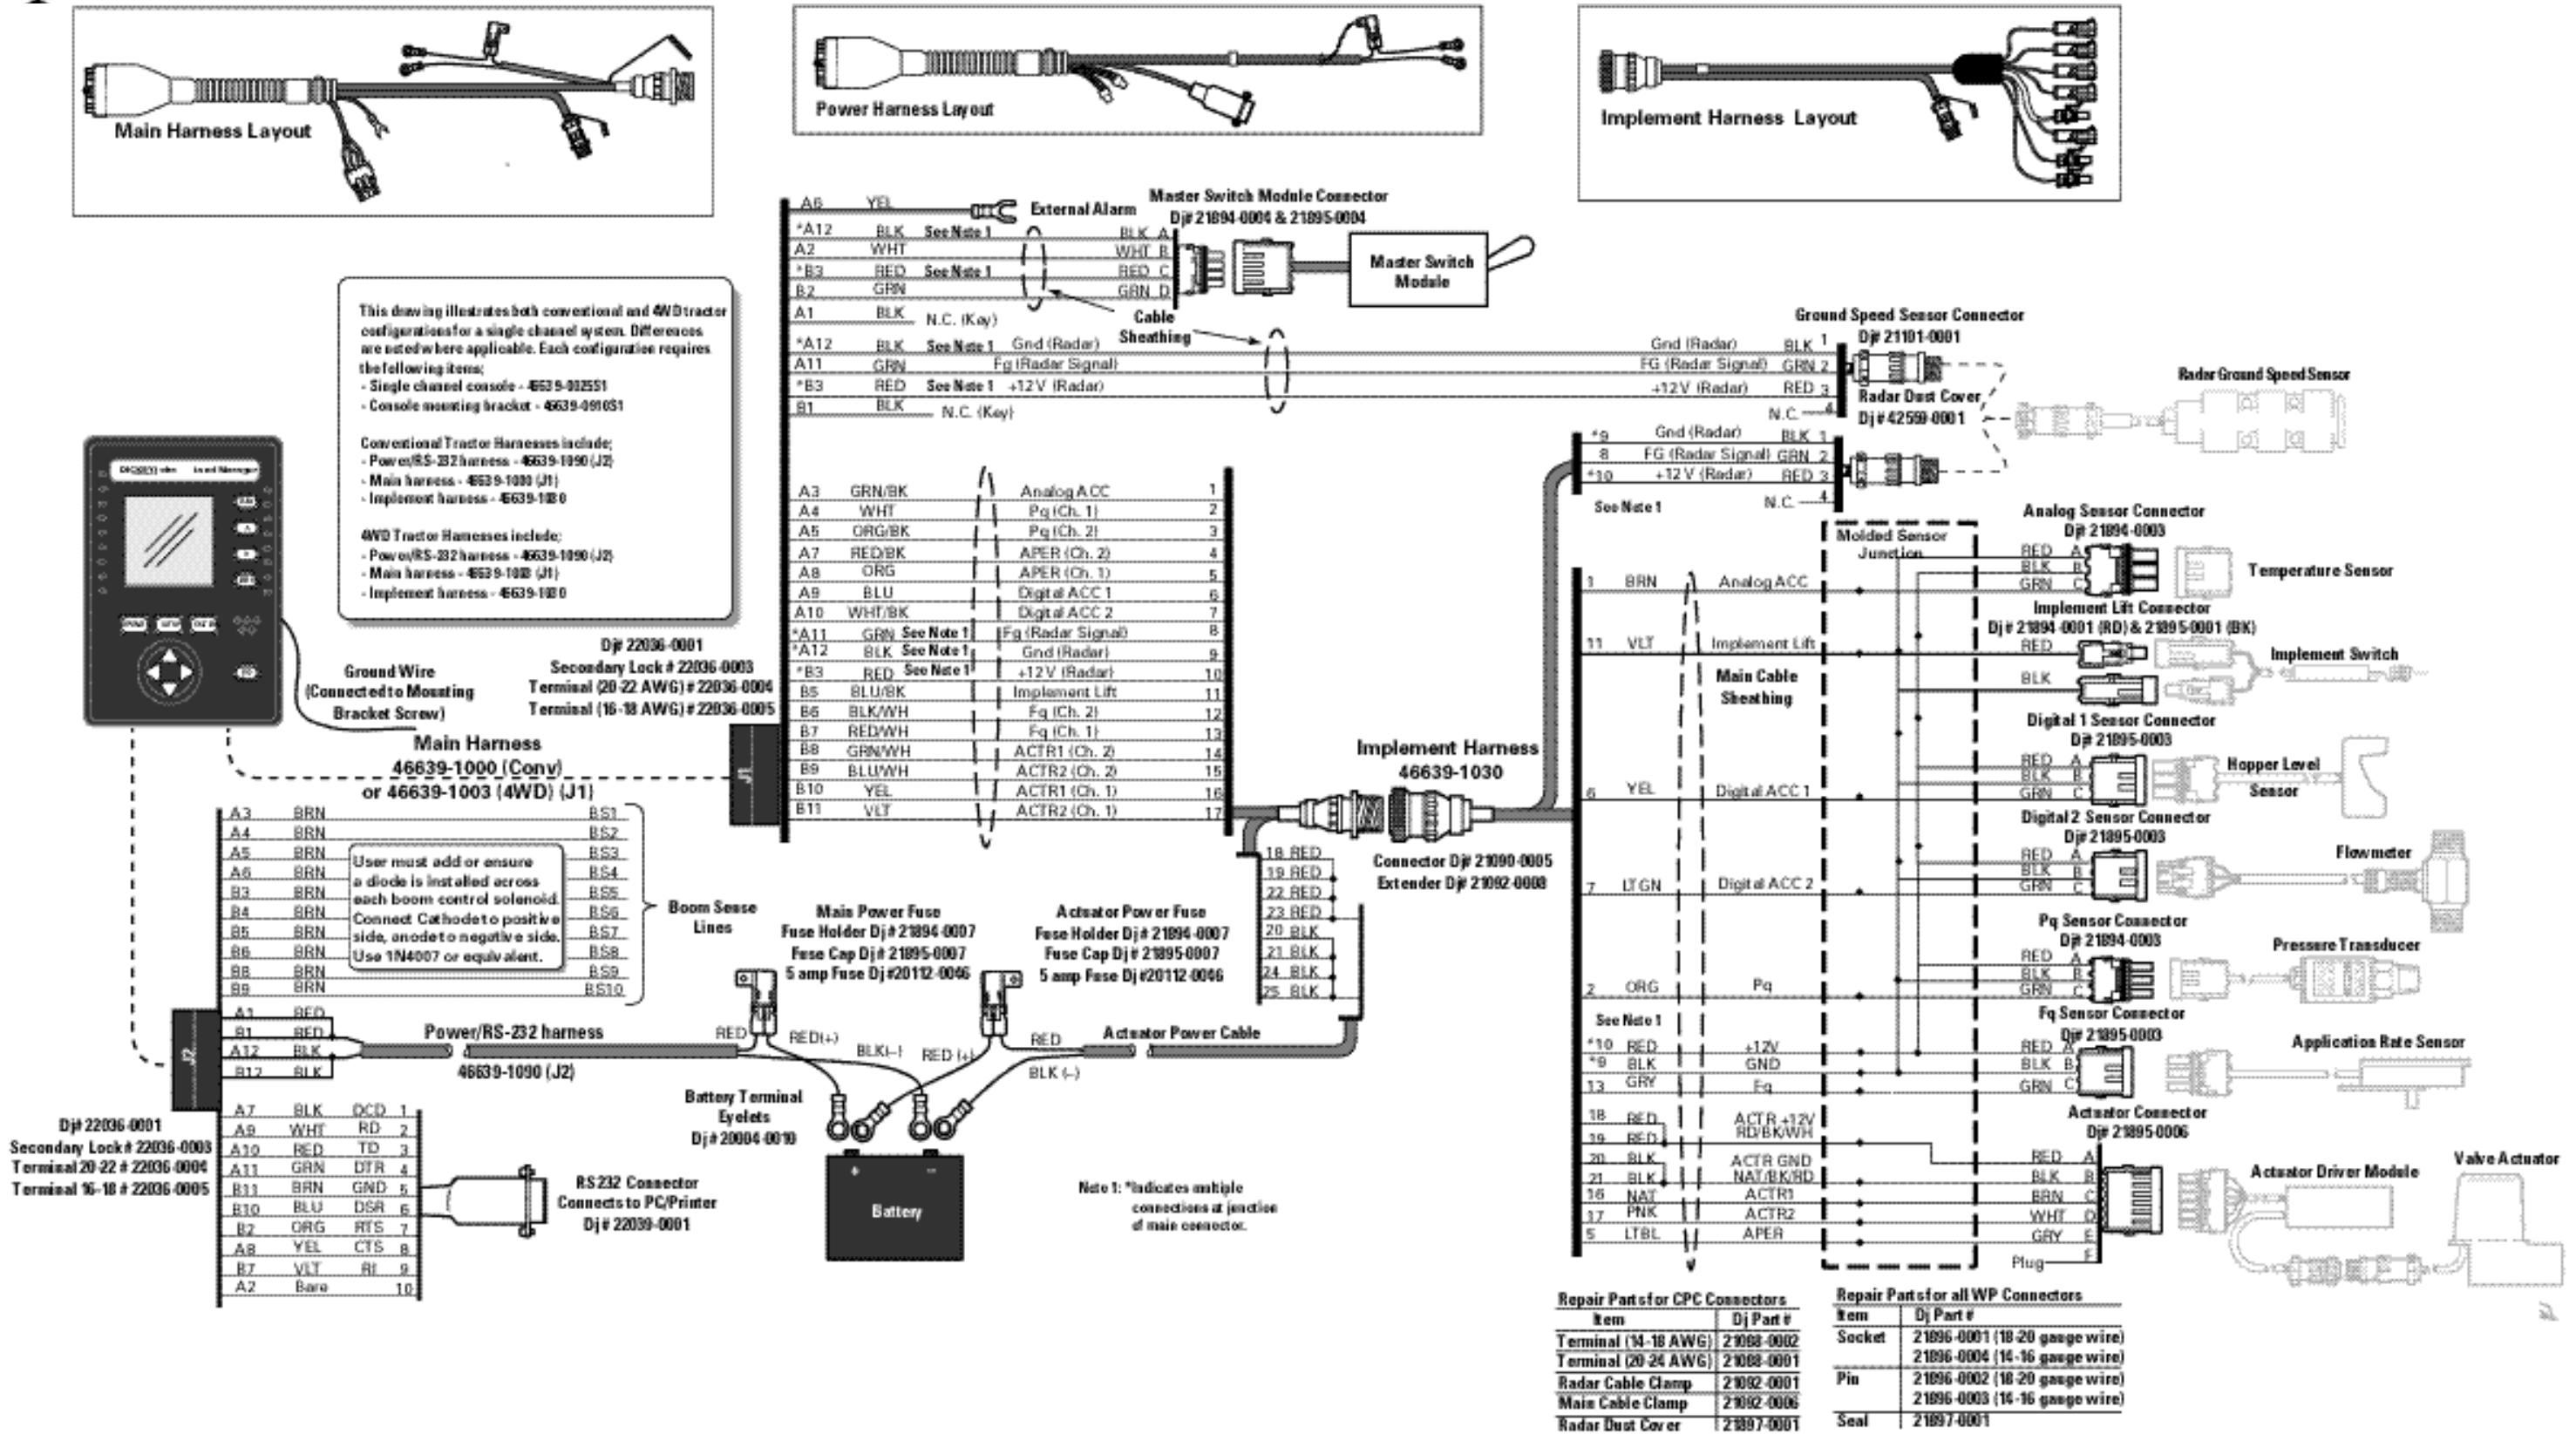


Figure 7. Conventional/4WD Harnesses, Single Channel System

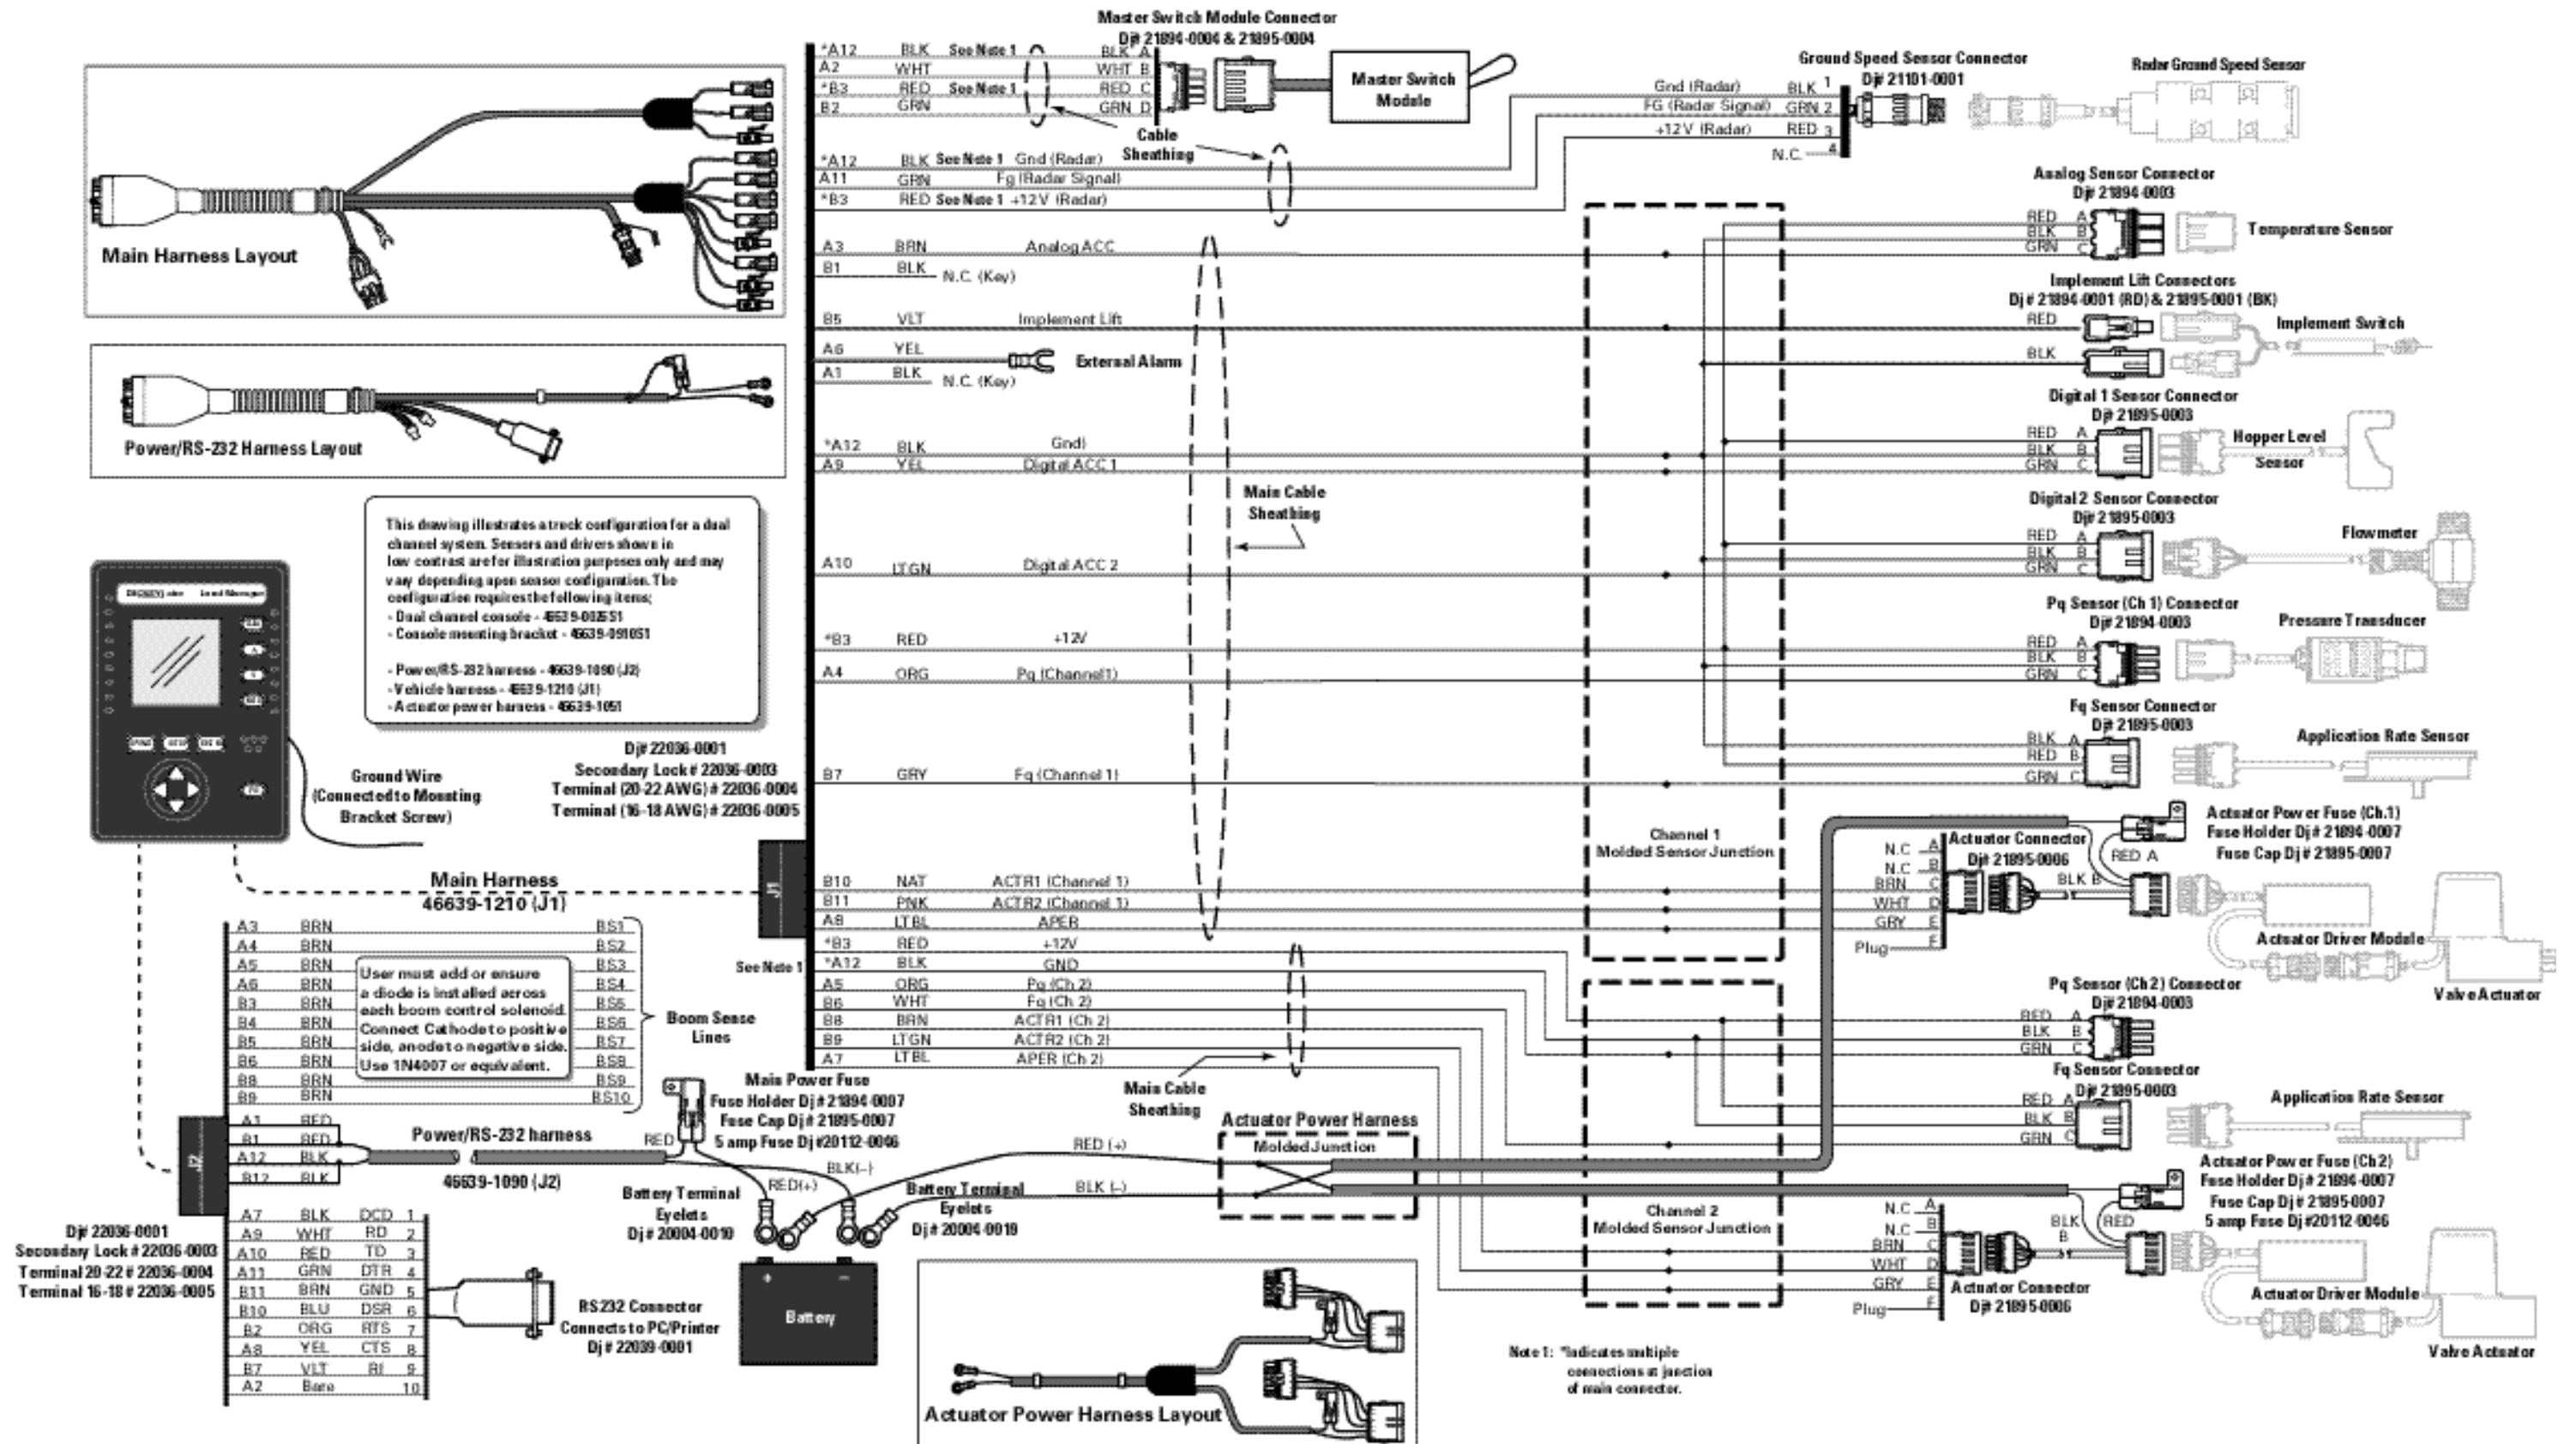


Figure 8. Truck Harnesses, Dual Channel System

OPERATOR'S SERVICE MANUAL

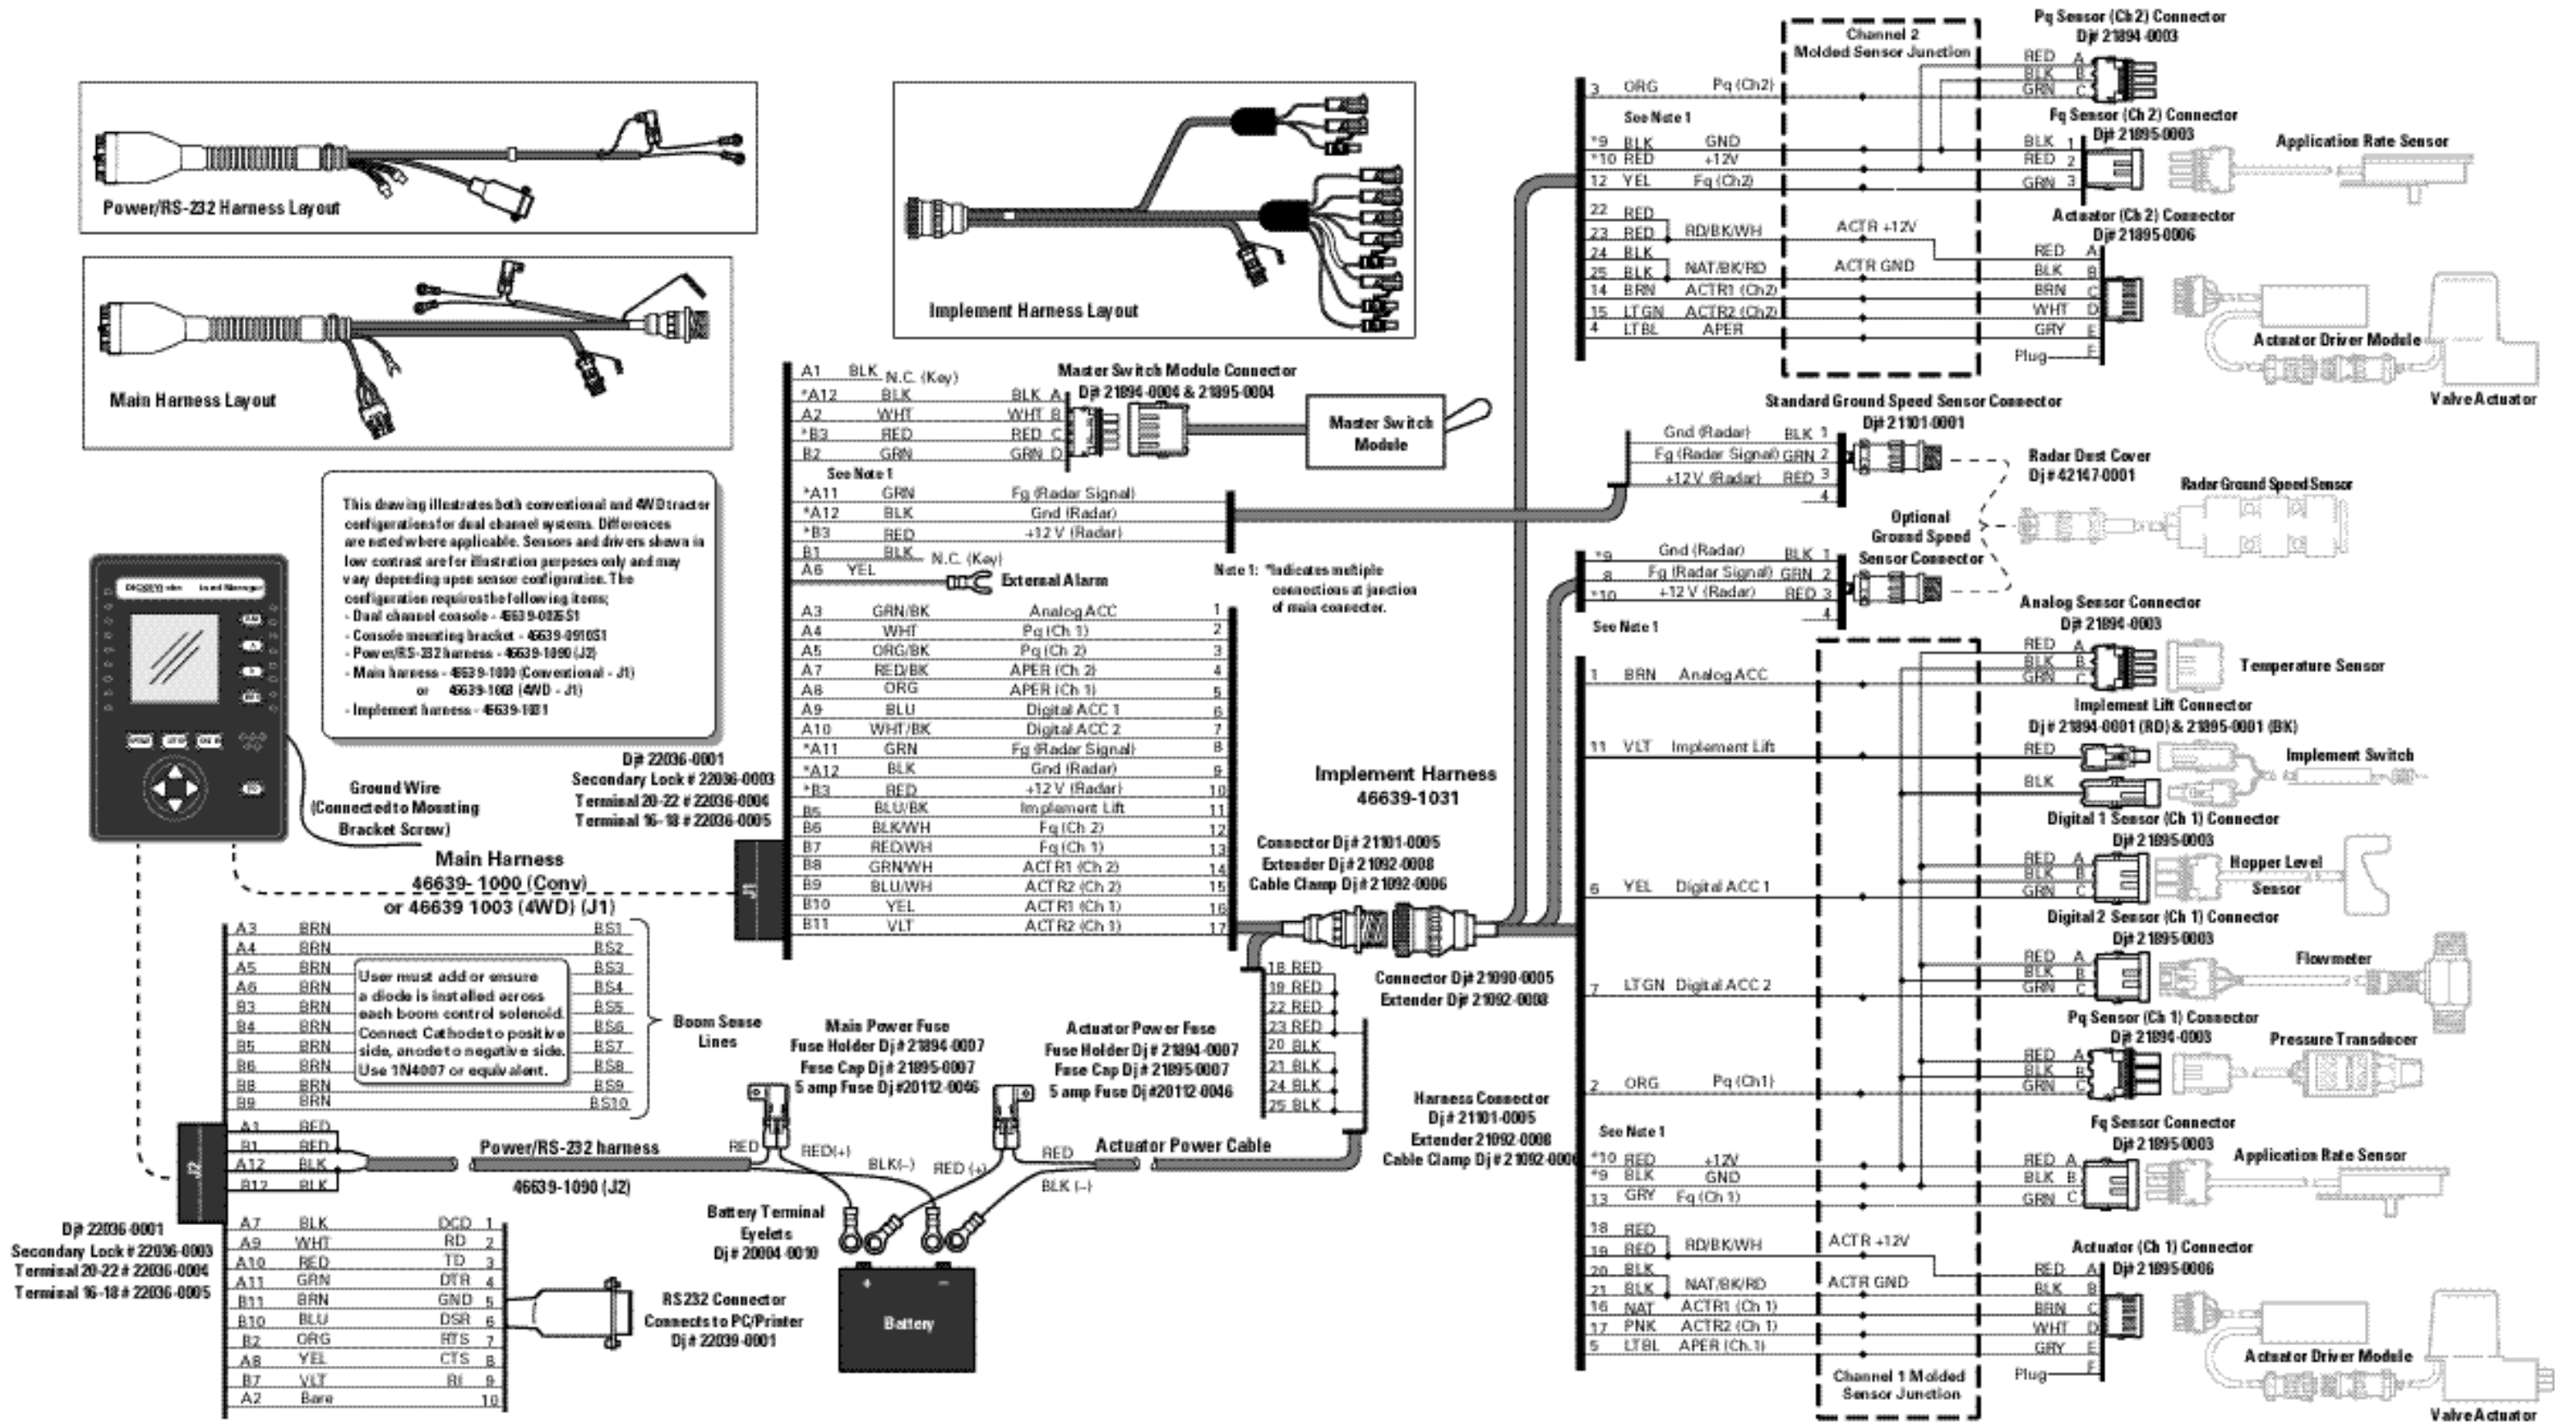


Figure 9. Conventional/4WD Harnesses, Single Channel System



This drawing illustrates both the CCS 100/CMS 100 and the CCS100/CMS 200 systems. Differences are noted where applicable. The configurations requires the following items:

- Single channel console - 4639-032551
- Console mounting bracket - 4639-091051
- CCS 100/CMS 100A adaptor harness 4639-1101: Uses the Weather Pack connector for three boom sense lines and three loosewires for additional boom sense lines.
- CCS 100/CMS 200A adaptor harness 4639-1200: Uses a single CPC connector for all boom sense lines. Three loosewires shown are not a part of this assembly.
- Power Actuator harness 4639-1050 supplies power to drive the air actuator.





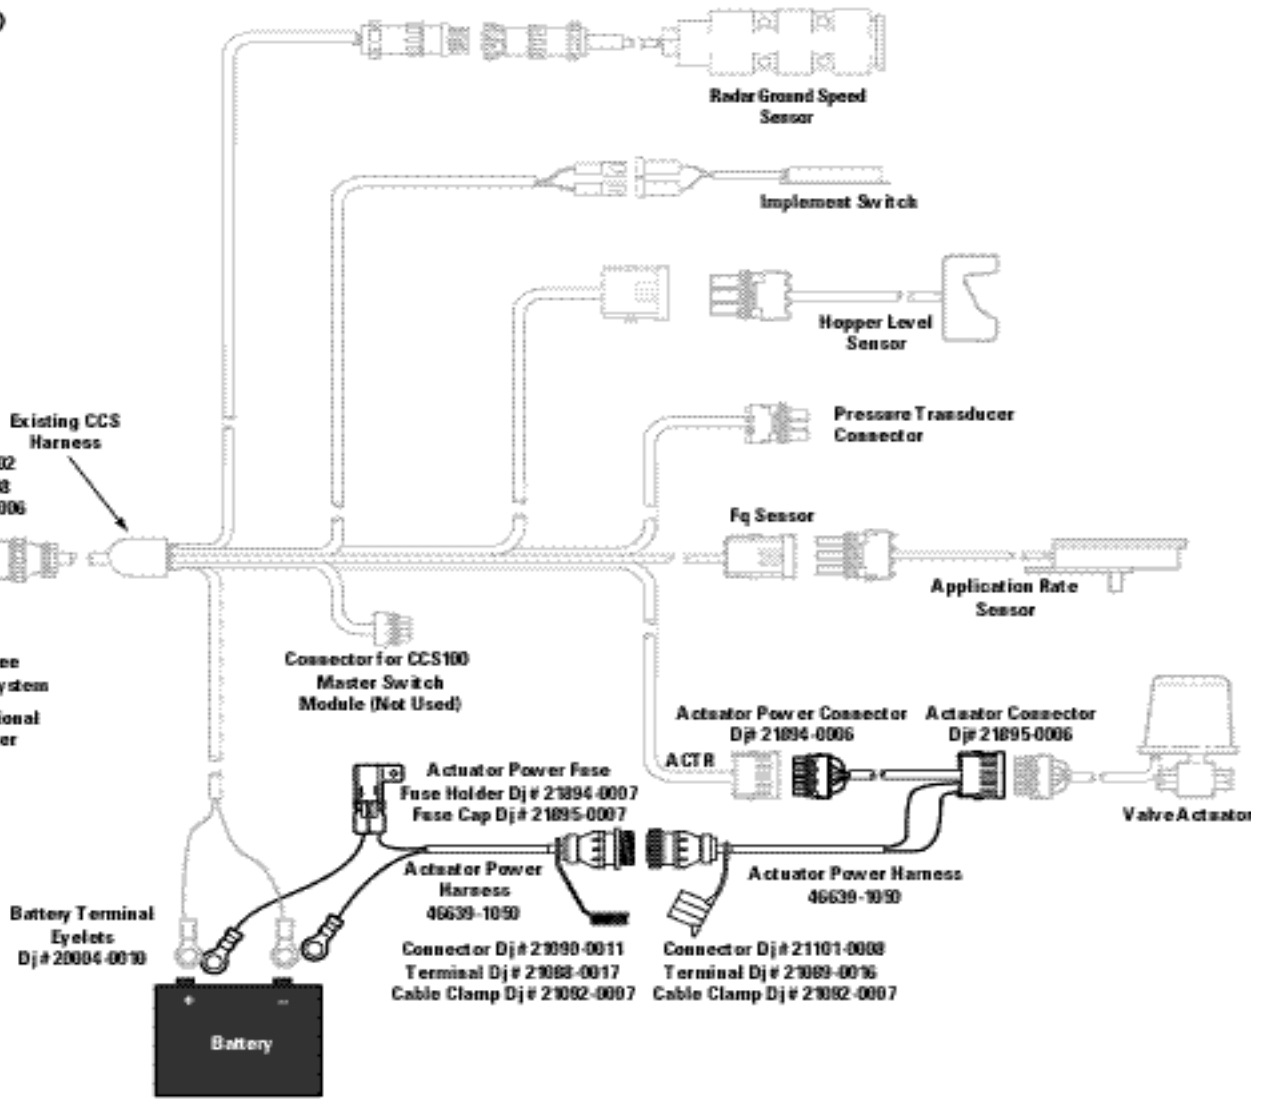


Figure 10. CCS/CMS Adaptor Harnesses, Single Channel System

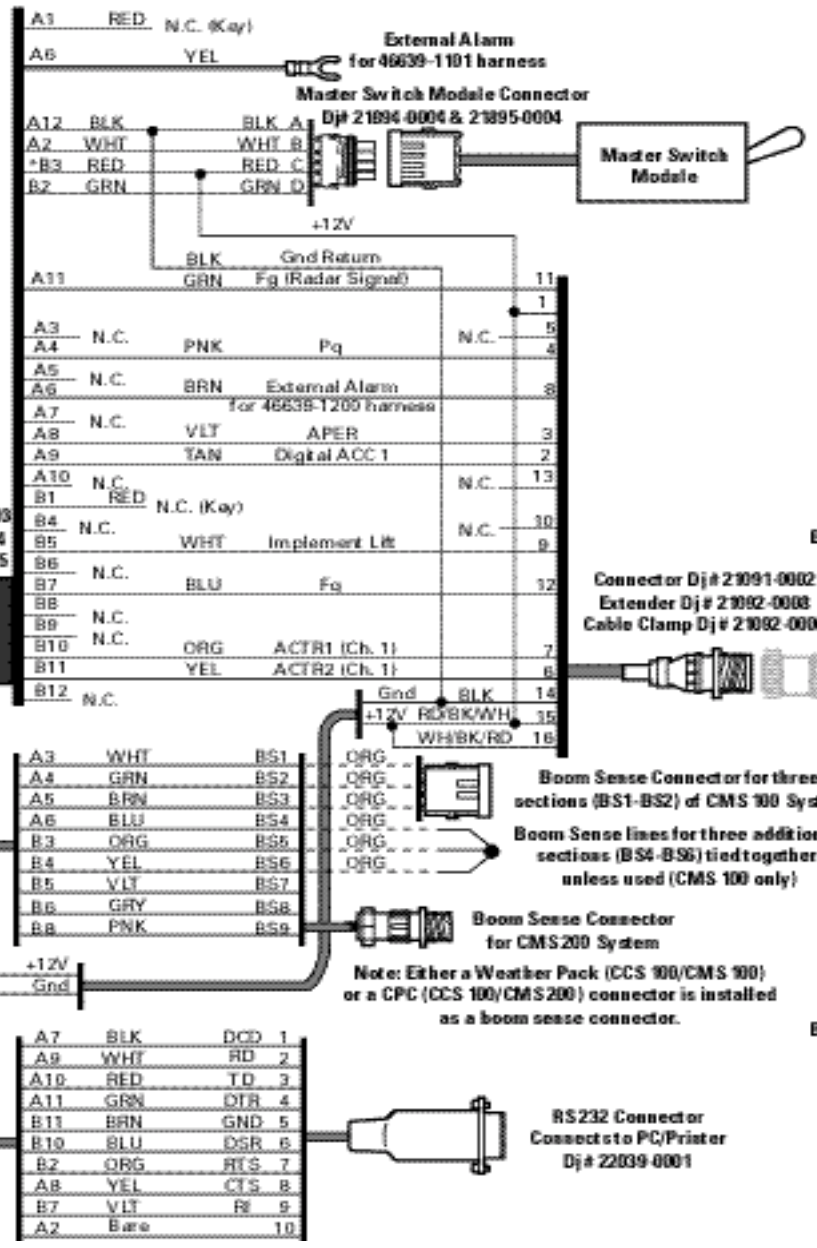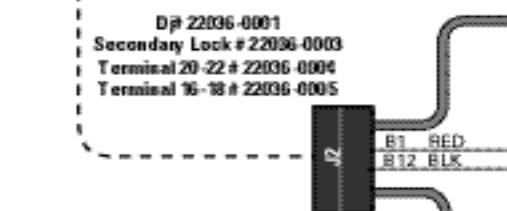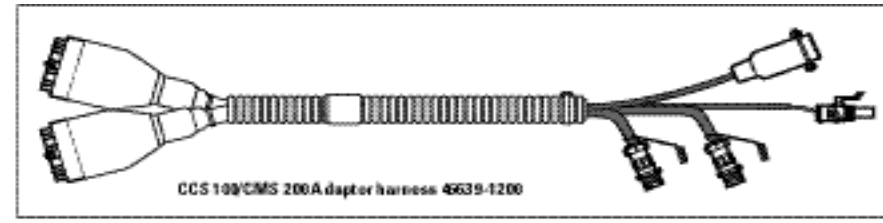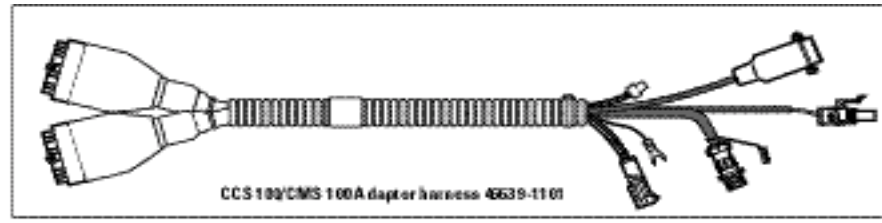

P.O. BOX 10 • 5200 DICKY-john Road • Auburn, IL. 62615
Telephone: (217) 438-3371 • Fax: (217) 438-6012
In either the USA or Canada, call (800) 637-3302.