



MULTI FUNCTION JOYSTICK™

One control system for multiple functions

The DICKEY-john Multi Function Joystick controls all hydraulic plow functions in one system. It provides multi axis proportional control for up to four independent hydraulic functions on a vehicle. The joystick also features an emergency wing extract switch and a convenient 12 volt outlet for accessories.

The system consists of the joystick armrest assembly, armrest mounting hardware, main control module, and harnessing to control the front plow and hoist. Add a slave module to this system for wing and scraper functions.

Multi function joystick features:

Multi axis joystick

Controls up to four hydraulic functions

Joystick grip with "safety" trigger to initiate movement of hydraulic function

Four independent switches for independent functions

Auto Wing Retract

Can be used for auger/conveyor reverse

Armrest assembly attaches to driver seat to maximize cab space

LED indication for function selection

Truck ignition key enables joystick functionality

Automatic power up diagnostic test of all system components



DICKEY-john®
CORPORATION


Revolutionizing Electronics

5200 DICKEY-john Road
Auburn, IL 62615
217-438-3371
217-438-6012
www.dickey-john.com

MULTI FUNCTION JOYSTICK™



Multi Function Joystick Switch Functions

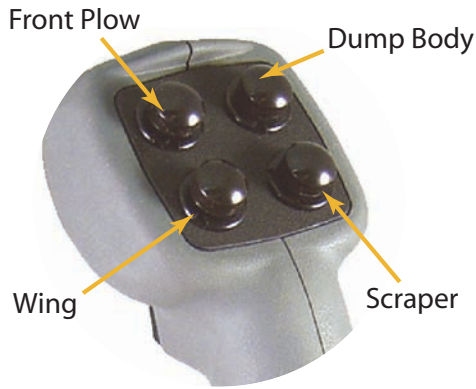

Backed by the Power of DICKY-john

When you buy a Multi Function Joystick you get all the dependability and value you expect from DICKY-john products. DICKY-john's advanced technology and superior electronics are backed by a team of expert, in-house mechanical, electrical, software, and test engineers. DICKY-john is an ISO 9000:2000 certified facility.

